


HSN-ACT-M01

Manual Actuator

HONEYWELL GAS EXTINGUISHING SYSTEM

The manual actuator allows manual activation of the cylinder valve. It is compulsory to always include such actuator. Located on top of the cylinder valve or solenoid valve, the lever is manually operated to open the valve and activate the system. It includes a safety pin to prevent accidental activation and this safety pin incorporates a safety seal to avoid incorrect manipulation.

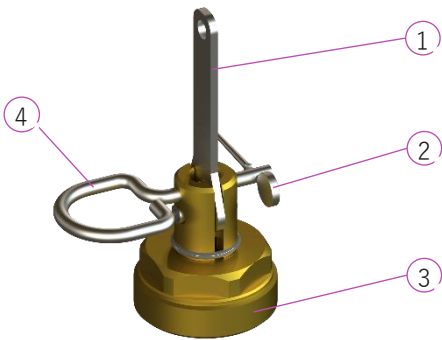

Manual actuator

Manual Actuator	
No.	Description
1	Lever
2	Safety lock
3	Connection to cylinder valve or solenoid actuator
4	Safety pin



Honeywell Fire
Emaar Business Park, Sheikh
Zayed Road Building No. 2, 2nd
Floor, 201. PO. Box 232362
Dubai, United Arab Emirates
Tel: +971 44541704

For more information
www.honeywell.com

© 2024 Honeywell International Inc.

Manual Actuator – PAGE:1

