

HSN-DH

Discharge Hoses

HONEYWELL GAS EXTINGUISHING SYSTEM

The discharge hose is used to connect the cylinder valve to the manifold so to direct the agent flow to the pipe network. It is installed between the cylinder valve and the check valve. In case of a modular cylinder, it is installed directly to the discharge pipe.

Discharge hose for DN12 valve (P/N: HSN-DH-12-400)


Discharge Hose for DN12 Valve	
No.	Description
1	Swivel female M24x1.5
2	Flexible hose, DN12, L: 400mm
3	Swivel female G3/4"



Discharge hose for DN12 valve

Discharge hose for DN33 valve (P/N: HSN-DH-33-400)

Discharge Hose for DN33 Valve	
No.	Description
1	Outlet G1 1/2" male thread (rigid)
2	Flexible hose, DN38, L: 400mm
3	Inlet 1 7/8" 12UN swivel female

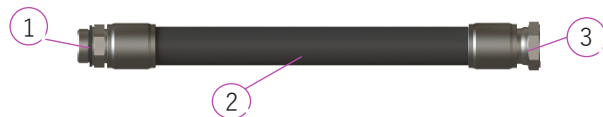

Discharge hose for DN33 valve

Discharge hose adaptor for DN33 valve (P/N: HSN-DHA-33-001)

Hose Adaptor for DN33 Valve	
No.	Description
1	Inlet G1 1/2" swivel female
2	Outlet G1 1/2" male thread (rigid)



Discharge hose adaptor for DN33 valve

Discharge hose for DN50 valve (P/N: HSN-DH-50-400)


Discharge Hose for DN50 Valve	
No.	Description
1	Outlet G1 1/2" male thread (rigid)
2	Flexible hose, DN50, L: 400mm
3	Inlet 2 1/2" 12UN swivel female



Discharge hose for DN50 valve

Discharge hose adaptor for DN50 valve (P/N: HSN-DHA-50-001)

Hose Adaptor for DN50 Valve	
No.	Description
1	Inlet G2" swivel female
2	Outlet G2" male thread (rigid)

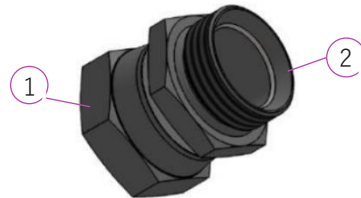

Discharge hose adaptor for DN50 valve



Honeywell Fire

Emaar Business Park, Sheikh
Zayed Road Building No. 2, 2nd
Floor, 201. PO. Box 232362
Dubai, United Arab Emirates
Tel: +971 44541704

For more information
www.honeywell.com

© 2024 Honeywell International Inc.

Discharge Hoses PAGE:2

Honeywell